




The Power Behind Performance®

SECURE MED BALL CART ASSEMBLY INSTRUCTIONS

1. Take Side (B) and attach one Bottom Corner Rail (D) to each bottom corner using one screw and two bolts per corner to securely attach.
2. Attach the Side Posts (G) to Side (B). To attach each post carefully guide the end of the post over the attachment site and secure with one screw per position.
3. Attach the Top Rails (E & F) to the remaining attachment sites on Side (B). Use one screw and two bolts to securely attach each rail.
4. Align the attachment sites of Side w/ Handle (A) with the ends of the posts and corner rails and affix.
5. While the unit is still on its side attach one caster to each corner. Be sure to completely fasten each caster to ensure the unit is balanced and stable during use.
6. Turn the unit upright and prepare to attach the Gate (C) to the Top Corner Rail w/ Hinge (E). Align the hinge sites on the Gate (A) and Top Corner Rail (E) so that the edges of the gate align with the perimeter edge of the cart. Insert bolts through the hinges and secure.
7. To attach Hinge (I) position the unit as shown below and use bolts on hinge to secure.

List of Included Parts

1. Side w/ Handle (A) – 1
2. Side (B) – 1
3. Gate (C) – 1
4. Bottom Corner Rails (D) – 2
5. Top Corner Rail w/ Hinge (E) – 1
6. Top Corner Rail w/ Lock Site (F) – 1
7. Side Posts (G) – 9
8. Casters (H) – 4
9. Hinge (I) – 1
10. Hardware

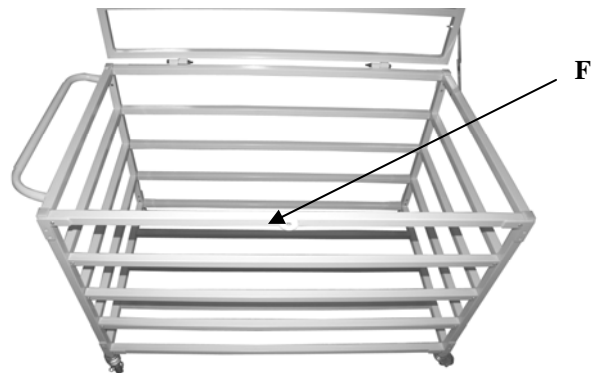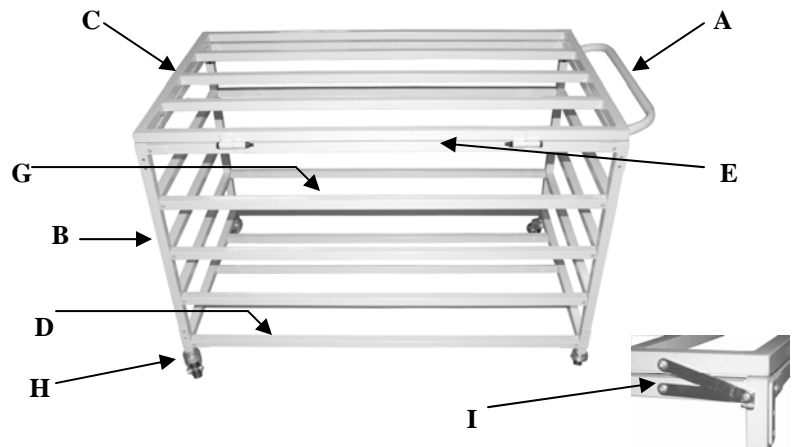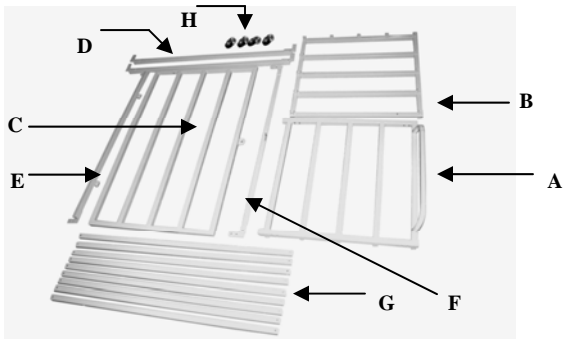

For more information on the Secure Medicine Ball Cart or other training products and programs, contact:

Power Systems Inc.
www.power-systems.com
1-800-321-6975